



## DIAL CORD RESTRINGING.

To restring the tuning or bandspread dials, first remove the chassis and front panel assembly from the cabinet. See "CHASSIS REMOVAL". Remove the front panel from the cabinet by removing the control knobs, the toggle switch mounting nuts, the screw at each side of the front panel trim strip, and the two screws near the bottom of the front panel. Then remove the four screws which secure the dial plate to the dial plate mounting brackets. Lift the main tuning dial pointer up by its base until it just clears the dial plate, then tilt the main tuning dial pointer back so that it points straight up, allowing the dial plate to be raised up and off of the bandspread dial pointer. Removal of the dial plate provides complete access to the drive pulleys. Exercise care to prevent damaging the dial pointers. For stringing details, see Figs. 3 and 4.

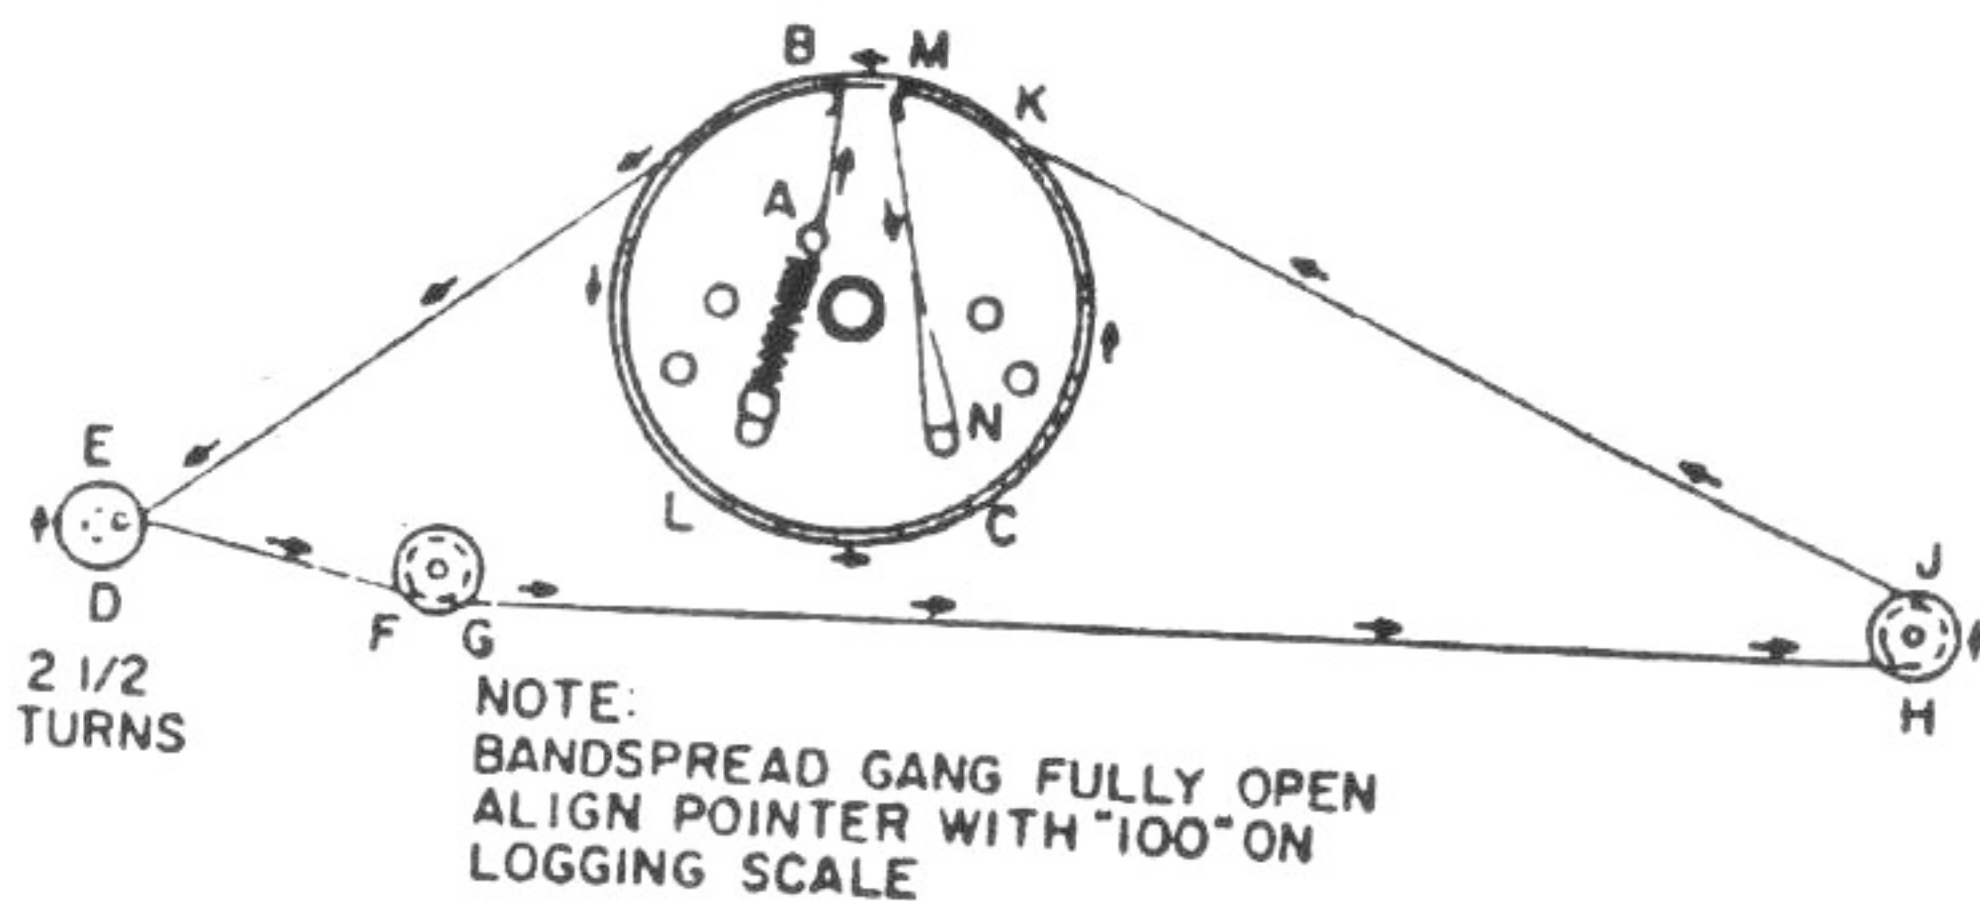

092-104072

Figure 3. Bandspread Dial Cord Stringing Diagram.

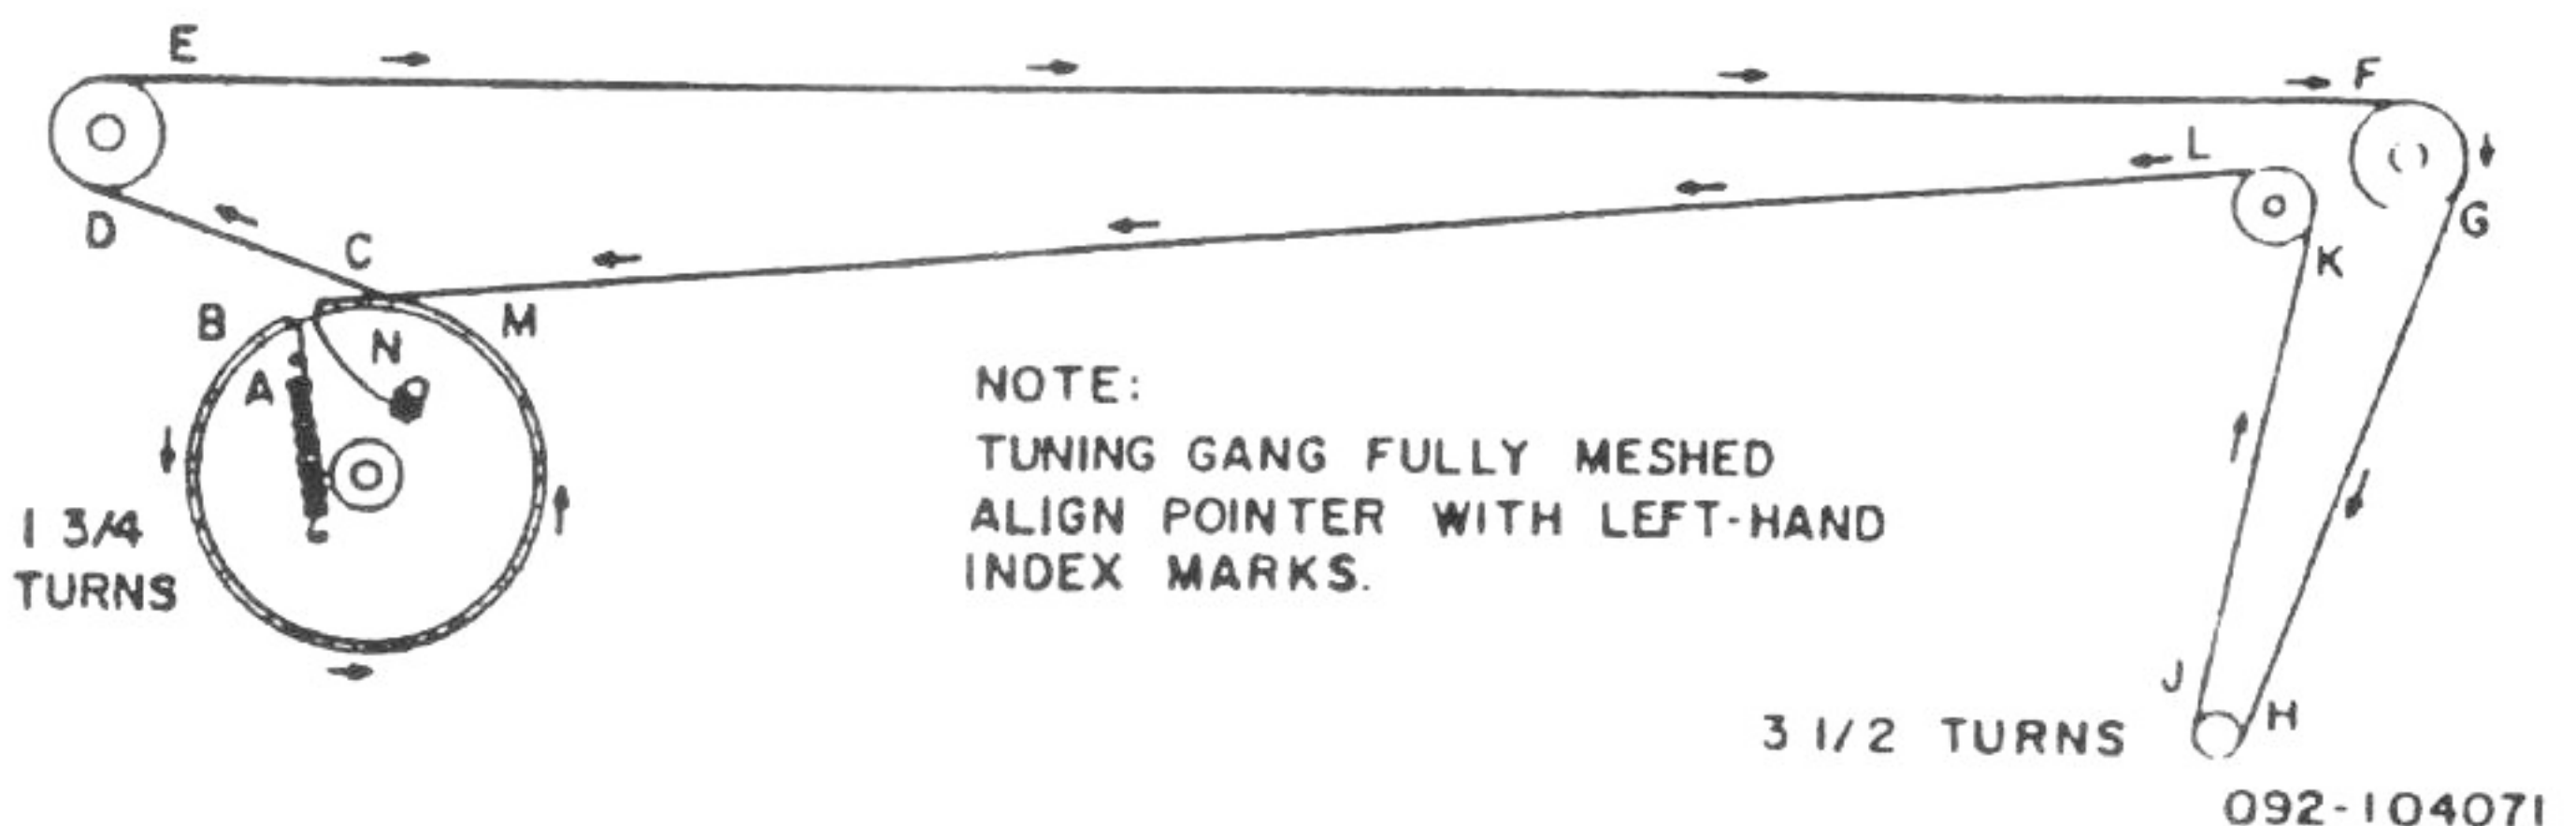

092-104071

Figure 4. Tuning Dial Cord Stringing Diagram.

# **K4XL's** **BAMA**

This manual is provided **FREE OF CHARGE** from the "BoatAnchor Manual Archive" as a service to the Boatanchor community.

It was uploaded by someone who wanted to help you repair and maintain your equipment.

If you paid anyone other than BAMA for this manual, you paid someone who is making a profit from the free labor of others without asking their permission.

You may pass on copies of this manual to anyone who needs it. But do it without charge.

Thousands of files are available without charge from BAMA. Visit us at <http://bama.sbc.edu>