


LAFAYETTE

*HE-30*

COMMUNICATIONS  
RECEIVER

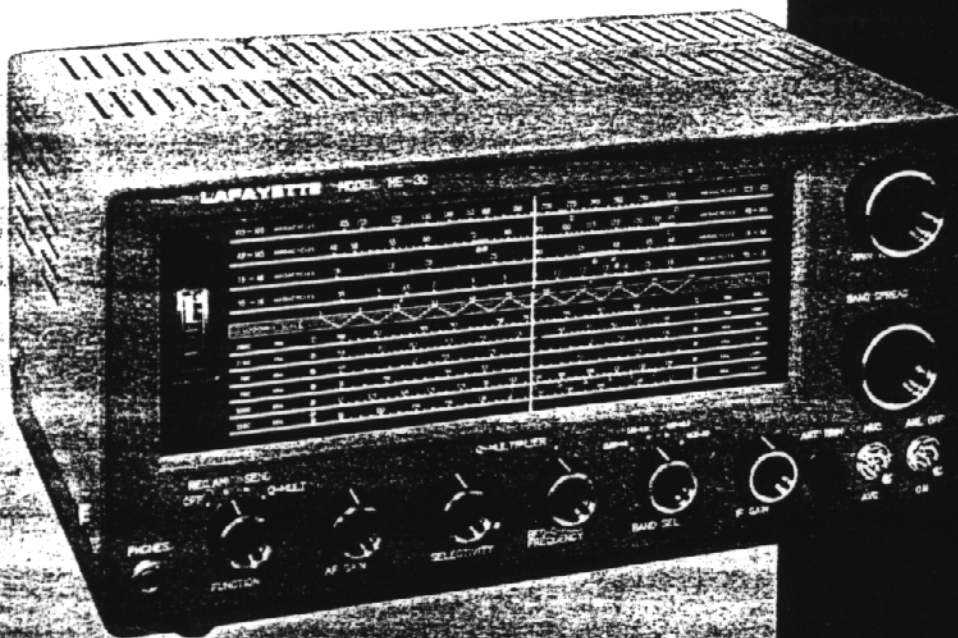

operating manual

## TECHNICAL SPECIFICATIONS

FREQUENCY RANGES..... BAND A 550 - 1600 Kcs  
BAND B 1.6 - 4.8 Mcs  
BAND C 4.8 - 14.5 Mcs  
BAND D 10.3 - 30 Mcs

BANDSPREAD..... Calibrated Electrical Bandsread  
80 and 40 meters, 5 Kcs per division  
20 and 15 meters, 20 Kcs per division  
10 meters, 50 Kcs per division

ANTENNA INPUT..... 50 - 400 ohms impedance

AUDIO POWER OUTPUT..... 1.5 watts

SENSITIVITY..... 1  $\mu$ v for 10 db S/N Ratio

SELECTIVITY.....  $\pm$  10 Kc at -60 db ( $\pm$  2 Kc at -6 db) without Q-Multiplier  
 $\pm$  0.8 Kcs at -6 db with Q-Multiplier

SPEAKER OUTPUT..... 4 or 8 ohms

HEADPHONE OUTPUT..... Low Impedance

POWER CONSUMPTION..... 50 watts at 117 volts AC, 60 cps

TUBE COMPLEMENT..... V1 - 6BA6 RF Amplifier  
V2 - 6BE6 Mixer  
V3 - 6BE6 HF Oscillator  
V4 - 6AV6 Q-Multiplier-BFO  
V5 - 6BA6 1st IF Amplifier  
V6 - 6BA6 2nd IF Amplifier  
V7 - 6AV6 Detector, 1st AF Amplifier, ANL, AVC  
V8 - 6AQ5 Audio Output  
V9 - 5Y3 Rectifier

DIMENSIONS..... 7" H x 15" W x 10" D

WEIGHT..... 21 lbs

ENTIRE CONTENTS COPYRIGHT 1961 BY LAFAYETTE RADIO ELECTRONICS CORP.  
165-08 LIBERTY AVE., JAMAICA 33, N. Y.

Printed in USA

14-216 6/61 1.25M/K

## UNPACKING INSTRUCTIONS

After unpacking the receiver, carefully check for possible damage which may have occurred in transit. Should any signs of damage be apparent (tubes broken, case dented, etc.), notify the store from which it was purchased. If the unit was shipped to you, also file a claim with the carrier.

The following accessories should be included in the carton:

- 1 Standard Phone Plug
- 1 Jumper Plug (for the auxiliary control socket)

## INSTALLATION

### POWER SOURCE

The receiver is designed to operate from a 90-125 volt, 50-60 cycle AC power source. **DO NOT OPERATE FROM A DC SOURCE.** The receiver is equipped with a voltage selector switch (located within the unit). This switch should normally be left in the 117V position.

### SPEAKER CONNECTION

A three-terminal strip marked OUTPUT is provided at the rear of the receiver for speaker connections. Any PM speaker with either 4 or 8 ohm impedance can be used. Simply connect one lead to the ground terminal "O" and the other lead to the terminal that corresponds to the speaker impedance. The output power of the receiver is sufficient to drive a 4 - 12 inch PM speaker adequately.

### HEADPHONES

A standard phone jack is provided on the front panel of the receiver for headphone reception. Low impedance (8-16 ohms) headphones are recommended for optimum results. Insertion of a phone plug into the jack automatically disconnects any speaker attached to the 8 ohm output terminal.

## ANTENNAS

The terminals marked "A1", "A2", and "E" at the rear of the receiver are for antenna and ground connections. Either of the following two types of connections can be used to obtain satisfactory results.


### INVERTED L ANTENNA

The inverted L type of antenna will provide satisfactory performance over the entire tuning range. Simply short A2 and E with a jumper wire, and connect one end of the antenna wire to A1. For good reception, the antenna wire should be placed as high as possible and 50-100 feet long (see Fig. 1). In some instances, a wire connected from terminal "E" to a water pipe may improve reception.


### DOUBLET ANTENNA

A doublet antenna will give excellent results, especially on amateur bands. A 75 ohms balanced transmission line should be used (as shown in Fig. 2). Since the doublet antenna provides optimum performance only at a given frequency, it should be cut to the length for the most often used band of frequencies. The overall length of a doublet antenna can be determined by using the following formula:

$$L \text{ (Length in feet)} = \frac{468}{\text{Frequency in megacycles}}$$

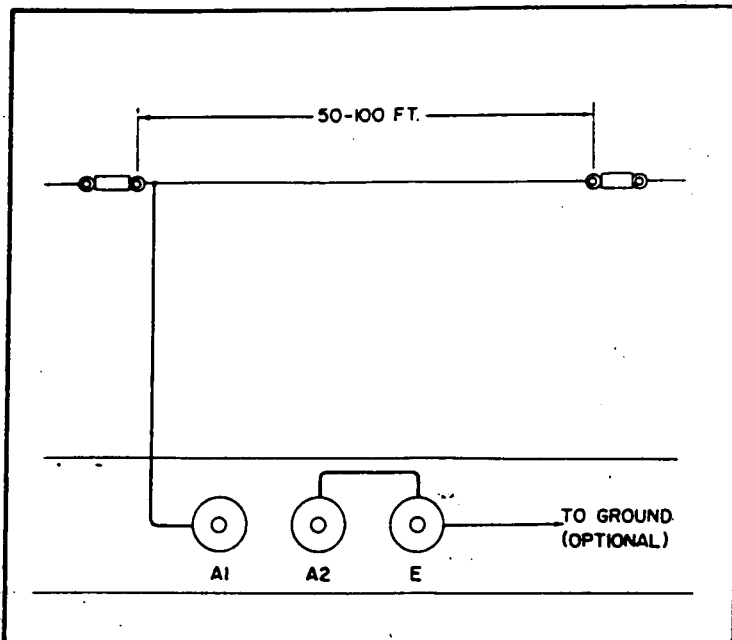

**FIGURE 1**  
Single Wire Antenna (Inverted L)

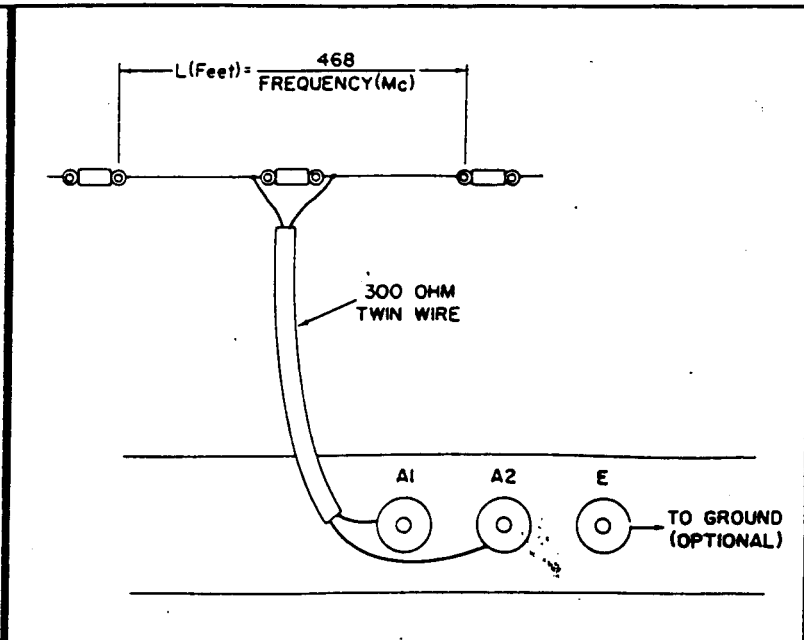

**FIGURE 2**  
Doublet Antenna

Since the doublet antenna displays directional properties broadside to its length, it should be oriented in such a manner that maximum signal pickup can be realized.


When using either a balanced transmission line or a twisted pair, the leads connect to terminals "A1" and "A2" respectively, and the jumper wire between "A2" and "E" is removed. A height of 30-50 feet is recommended for good reception of weak signals.

#### FUSE

A 2 amp fuse is located at the rear of the receiver. To remove it, unscrew the spring loaded cap. Replace only with one of a similar rating.

#### AUXILIARY CONTROL

A socket in the back of the receiver allows simultaneous control of this receiver with a transmitter. An external switching device can be constructed so that the receiver will be inoperative during periods of

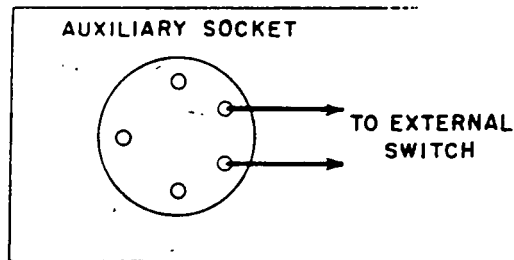

**FIGURE 3**  
Auxiliary Control Socket

transmission. In this case, the FUNCTION switch is placed in the SEND position. The external switch is attached to the 5-pin plug so that pins 3 and 2 (see Fig. 3) will be connected when signal reception is desired. This plug is then inserted into the socket in place of the jumper plug. In this manner, signal reception will be instantaneous, as plate voltage will be applied to the RF stages when the switch is closed accordingly.

For normal operating conditions with no external switching, the jumper plug provided must be inserted into the socket. Pins 3 and 2 of the plug are shorted, thus providing plate voltage to the RF stages. To disable the receiver under these conditions, set the FUNCTION switch to the SEND position. In this position plate voltages to the RF stages are cut off. Returning the switch to REC AM will provide instantaneous signal reception.

## INITIAL CONTROL SETTINGS

CONTROL	AM SETTINGS	CW SETTINGS	SSB SETTINGS
FUNCTION	REC AM	Q-MULT	Q-MULT
BAND SEL	Set for desired range	Set for desired range	Set for desired range
SELECTIVITY	CW-SSB*	CW-SSB	CW-SSB
BFO-Q-MULT FREQUENCY	Mid-position	Mid-position	Mid-position
IF GAIN	Maximum	Adjust for desired audio level	Adjust for desired audio level
ANT TRIM	12 o'clock position	12 o'clock position	12 o'clock position
MVC-AVC	AVC	MVC	MVC
ANL OFF-ON	Optional	Optional	OFF
BANDSPREAD	Set to 100 on Logging Scale	Set to 100 on Logging Scale	Set to 100 on Logging Scale
AF GAIN	Adjust for desired audio level	2/3 to 3/4 clockwise	2/3 to 3/4 clockwise

\* Setting the SELECTIVITY control to CW-SSB with the FUNCTION switch in REC AM disconnects the Q-Multiplier from the IF, allowing normal IF band pass.

### THE Q-MULTIPLIER CIRCUIT

A Q-Multiplier provides the additional selectivity often required for optimum reception of signals in the congested short-wave bands. In your receiver, the Q-Multiplier circuit serves a dual function - Q-Multiplier and BFO. For CW and SSB reception, the circuit is employed as a BFO. The circuit may be employed as a Q-Multiplier during phone reception if conditions require the use of additional selectivity.

A little experience in using the Q-Multiplier will be necessary for optimum results under different receiving conditions. In the hands of an experienced operator, the Q-Multiplier is a very handy tool, and will greatly enhance the performance of the receiver.

The controls associated with the Q-Multiplier circuit are the SELECTIVITY and BFO-Q-MULT FREQUENCY controls. They are not operative unless the Function switch is in the Q-MULT position.

#### SELECTIVITY CONTROL

When the SELECTIVITY control is in the CW-SSB position, the circuit oscillates, thus providing the beat signal necessary for CW or SSB reception. Off the CW-SSB position, the circuit is connected to the IF stage and now acts as a narrow gate through which the IF signals must pass. The width of the "gate" is determined by the position of the SELECTIVITY control. Advancing the control from the fully counter-clockwise position serves to peak the signal increasingly until a point of oscillation is reached. Sharpest selectivity is reached just prior to oscillation.

#### BFO-Q-MULT FREQUENCY CONTROL

The action of this control is determined by the position of the SELECTIVITY control. When the Selectivity control is set to CW-SSB, the BFO-Q-MULT FREQUENCY control is used to vary pitch for CW reception or to provide clarity of signal for SSB reception.

When the Selectivity control is used to increase selectivity during Q-Multiplier operation, (as described previously), the sharp peak produced can be moved around within the IF pass band by means of the BFO-Q-MULT FREQUENCY CONTROL to reduce or eliminate interference from adjacent signals.

## USING THE CIRCUIT AS A Q-MULTIPLIER

Initially, all controls on the receiver should be set to the positions indicated in the chart for AM settings. Tune in desired station. Set SELECTIVITY to the fully counter-clockwise position and FUNCTION to "Q-Mult". Increase AF gain if necessary. Advance the SELECTIVITY control until the desired degree of selectivity is obtained. The point of maximum selectivity is reached just before the circuit breaks into oscillation. The BFO-Q-MULT FREQUENCY control may now be adjusted to provide a reduction, or to eliminate, any adjacent channel interference.

## USING THE CIRCUIT AS A BFO

Initially, all controls should be set as indicated in the chart for CW or SSB operation. Under these conditions the BFO-Q-MULT FREQUENCY control is used to vary the pitch (CW) or for clarity of signal (SSB). The SELECTIVITY control remains permanently in the CW-SSB position for CW or SSB reception.

## TUNING

The main tuning and bandsread dials are calibrated in megacycles and contain special markings to simplify tuning. The major amateur radio bands are contained in the 1.6 to 4.8, 4.8 to 14.5 and 10.3 to 30.00 megacycle bands. The location of each amateur band is indicated by heavy white scale lines on the main tuning dial. The circled letter or letters which appear with each band indicate the bandsread scale to be used. Calibration of the main tuning scales is correct when the bandsread pointer is set at 100 on the LOGGING SCALE.

Bandsreading on the amateur bands is carried out in the following manner: Set the bandsread pointer initially to 100 and the main tuning pointer directly over the circled letter for the band to be tuned. In some cases the band is split between two such letters. For example, B1 and B2 together cover the range of 7.0 to 7.35 megacycles - B1 from 7.0 to 7.17, B2 from 7.17 to 7.35 megacycles. The calibrated bandsread scale which is used is indicated to the right and left-hand side. Thus, if the main tuning pointer is set over B1, the bandsread scale in use is the one marked B1, the fourth one down. Tuning is then accomplished solely with the BANDSPREAD control.

Short-wave bandsreading, for other than amateur bands, is accomplished by setting the bandsread pointer at 100 on the Logging Scale and the main tuning pointer at the high end of the short-wave band to be tuned. Rotate the bandsread control to tune over the band. Moving the bandsread pointer towards 0 on the logging scale subtracts from the frequency indicated on the main tuning scale. Logging of short-wave stations is possible by noting the readings on both the Main Tuning and Logging Scales.


## S - METER READINGS

The S-Meter provides a means of measuring the relative strength of incoming AM signals. Relative readings are only correct when the IF GAIN control is fully clockwise. Measurements are read in S units from 1 to 9 and in decibels above S9 from 0 to 40 db. The circuit is disabled when the MVC / AVC switch is in the MVC position.

A ZERO ADJ control at the rear of the receiver is provided for zeroing the S-Meter electrically. This adjustment is made with the antenna disconnected, IF GAIN control at maximum and AVC on.

## ANTENNA TRIMMER

The ANT TRIM control, adjustable from the front panel, acts as a compensating capacitor to permit optimum matching of the receiver to the antenna at all frequencies. Initially, the control should be set to its mid-position (the dot on the front surface of the knob at 12 o'clock position). The control should always be adjusted for maximum background noise. Each setting will be good only over a limited range of frequencies. The trimmer should therefore always be readjusted after tuning to the general area where the expected signal is to be found.

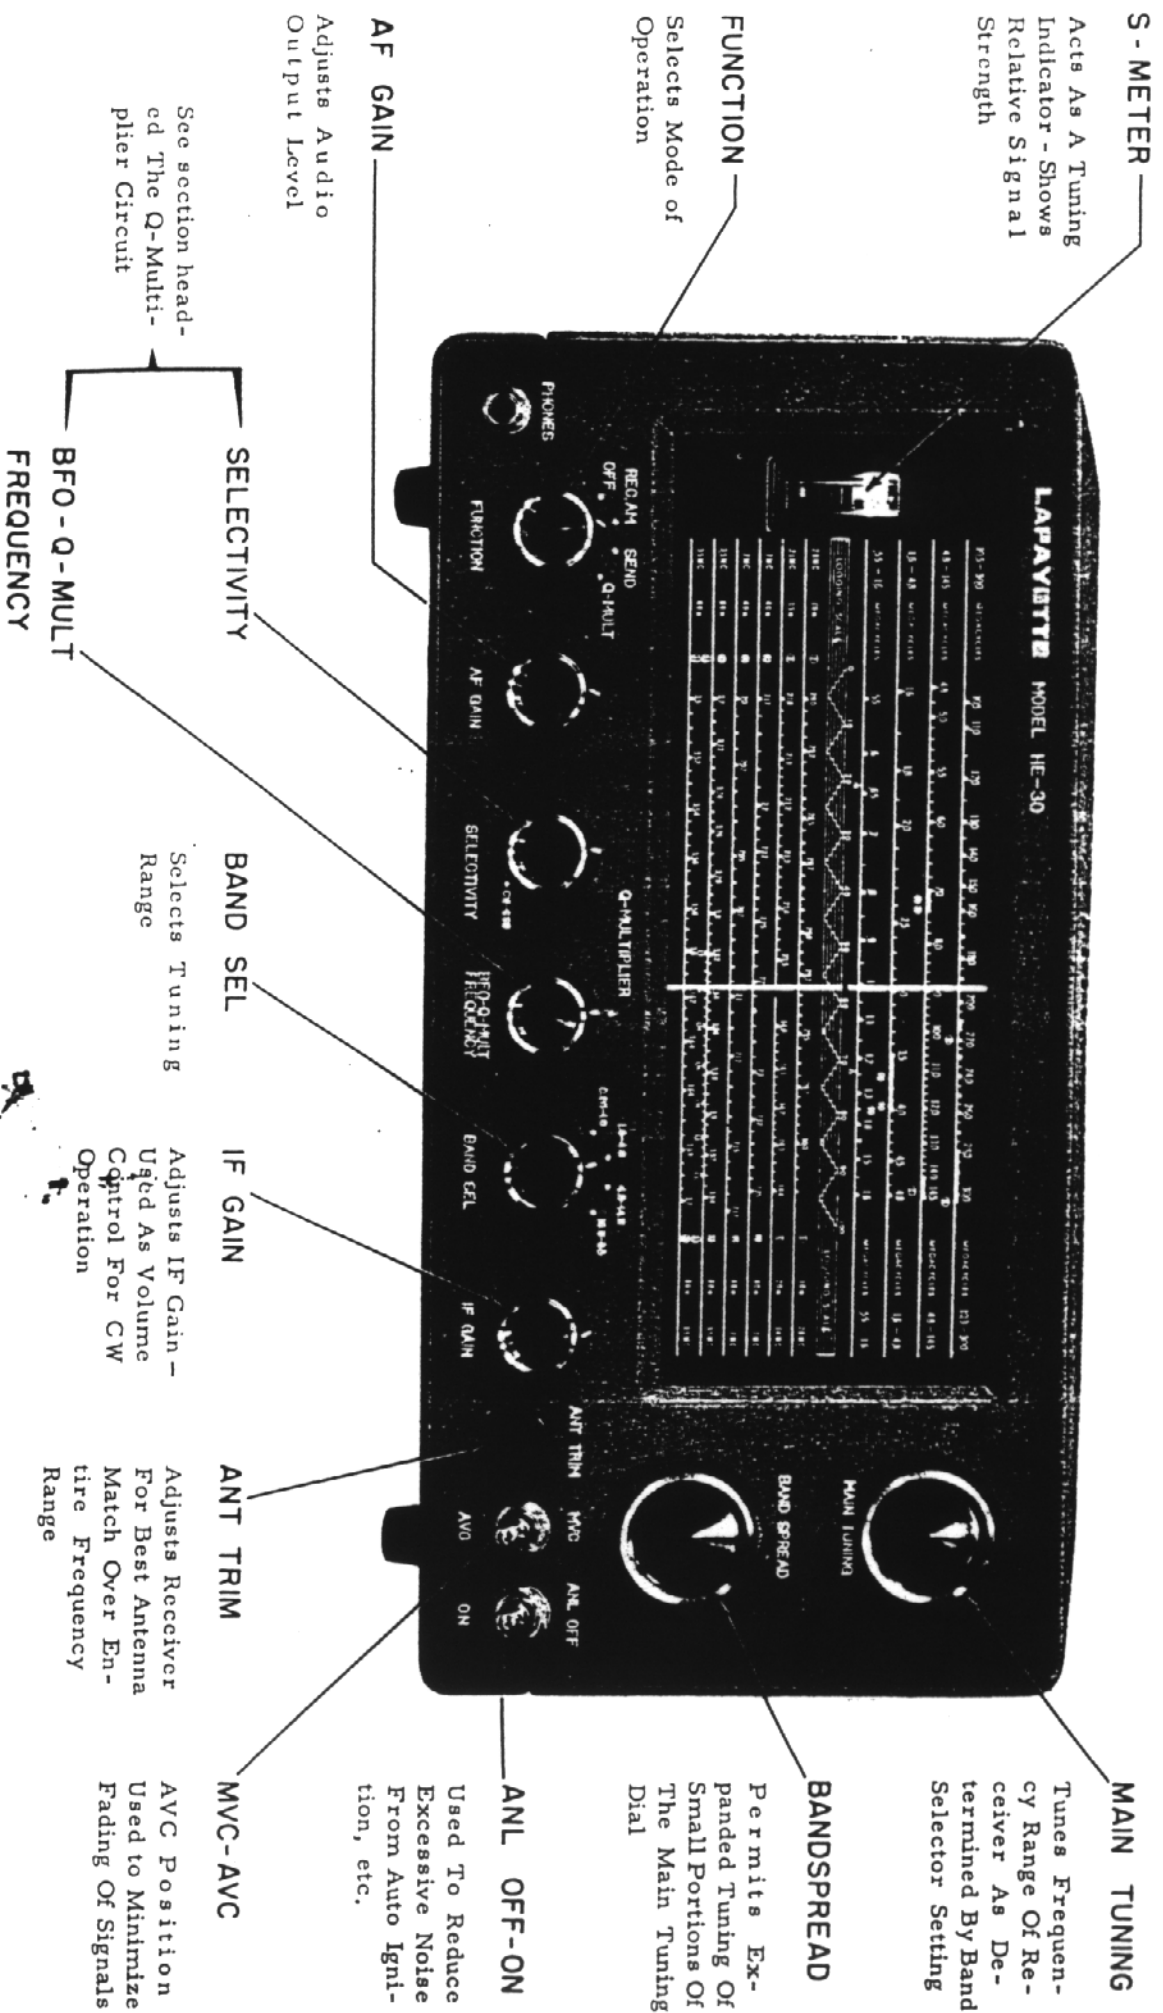

**LOCATION AND FUNCTION OF CONTROLS**

## AM OPERATION

For the reception of broadcast stations, short-wave listening, etc., place all controls in the positions indicated in the Initial Control Settings chart. Tune in station, using Main and Bandsread tuning controls as indicated in the section under "TUNING". Adjust ANT TRIM for highest "S" meter reading on signal. This antenna control setting is satisfactory while operating over a limited frequency range. If excessive spurious noises such as those caused by auto ignition make reception difficult, place the ANL OFF switch to the ON position. The automatic noise limiter should be used only when necessary, since it tends to reduce the overall efficiency of the receiver.

If interference from nearby stations makes reception difficult, the Q-Multiplier may be employed to minimize or eliminate the interference. Since the use of the Q-Multiplier results in a narrower bandwidth it should only be employed when interference is severe and where maximum fidelity is not required.

## CW OPERATION

The control settings required for the reception of code signals are indicated in the chart. AVC is switched off and the IF GAIN control is used as a volume control. Tune signal to zero beat. The BFO-Q-MULT FREQUENCY control should then be adjusted on either side of white dot for desired pitch.

## SINGLE SIDE BAND OPERATION

The settings of controls for SSB reception is essentially the same as for CW (see chart). The BFO frequency however, is used in this case for carrier reinsertion. AVC is switched off and the IF GAIN control used to adjust the level. Tune station in with BANDSPREAD control and then adjust BFO-Q-MULT FREQUENCY control for clarity of speech. Slight readjustment of the BANDSPREAD may be necessary to provide best audio quality.

## SHORT-WAVE LISTENING

On the short-wave frequencies are to be found radio stations transmitting from all over the world. Many of these stations provide English-language broadcasts. The frequencies on which the majority of short-wave broadcast stations operate are found in the two upper bands of your receiver (4.8 to 14.5 megacycles and 10.5 to 30 megacycles). A characteristic of short-wave is that reception varies with the time of day, the season of the year and with weather conditions. In order to know just when and where to listen, a listening chart which lists English language broadcast stations best heard in North America is included in this manual. "Better Shortwave Reception" by William I. Orr (available from Lafayette Radio as BK1032) is recommended to the short-wave listener and amateur alike. It provides an introduction to short-wave radio for the beginner and presents some of the practical aspects and helpful advice for the more experienced listener.



# Listen to the Voices of the World

## ENGLISH LANGUAGE SHORT-WAVE BROADCAST STATIONS BEST HEARD IN WESTERN NORTH AMERICA

Readers in the western part of the United States and Canada will find the following list of "Best Heard" stations helpful in tuning the short-wave broadcast bands. The left-hand column lists the hour in Pacific Standard Time for broadcasts in English only; in the middle column, the city and country from which the broadcasts originate are listed with the name of the station used for identification in parentheses; and on the right are the frequencies and call letters for stations using them during their broadcasts.

TIME (PST)	CITY, COUNTRY (NAME)	FREQUENCIES (kc.)
6:00-8:00 a.m.	Manila, Philippines (The Call of the Orient)	11855, 9730
6:30-7:30 a.m.	Djakarta, Indonesia (The Voice of Indonesia)	9710, 4910
7:15-8:15 a.m.	Melbourne, Australia (Radio Australia)	11770 (VLC.11)
8:00-8:15 a.m.	Stockholm, Sweden (Radio Sweden)	15155
10:00-1:00 p.m.	London, England (North American Service)	17700, 15310
1:00-2:15 p.m.	London, England (General Overseas Service)	15310, 11930
2:15-3:15 p.m.	London, England (General Overseas Service)	17825 (JOA22), 18235 (JOH9)
3:00-3:30 p.m.	Tokyo, Japan (Radio Japan)	11930, 9825
3:00-7:00 p.m.	London, England (General Overseas Service)	11930, 9825
3:00-10:00 p.m.	Moscow, USSR (Radio Moscow)	17965, 15140
4:30-4:50 p.m.	Tokyo, Japan (Radio Japan)	15235 (JO19), 11705 (JOA4)
4:55-5:45 p.m.	Montreal, Canada (Radio Canada)	15190 (CKCX), 11720 (CHOL)
5:00-7:30 p.m.	Cape Haitien, Haiti (The Evangelistic Voice) — no broadcast on Wednesday and Thursday	15400, 9656
5:30-7:15 p.m.	Berne, Switzerland (Switzerland Calling)	11985 (HERS), 6185 (HER3)
6:00-9:00 p.m.	Quito, Ecuador (HCJB — The Voice of the Andes) — no broadcast on Monday	15115, 11915, 9745
6:25-6:45 p.m.	Rome, Italy (Italy Broadcasting & TV System)	9575, 6010
6:30-6:40 p.m.	Cologne, Germany (The Voice of Germany)	11795, 9640
6:30-7:00 p.m.	Warsaw, Poland (Radio Warsaw)	9525, 6025
6:30-7:10 p.m.	Hilversum, Holland (Radio Netherlands)	11950, 9590
6:30-8:00 p.m.	Hilversum, Holland (The Happy Station) — special program on Sundays only	11950, 9590
6:45-7:00 p.m.	Brasaville, FEA (Radio Brasaville, French Equatorial Africa)	11870, 9825
6:55-7:35 p.m.	Montreal, Canada (Radio Canada)	11845 (CKNK), 9656 (CKLP)
7:00-7:30 p.m.	Bucharest, Romania (Bucharest Calling)	11937, 9570
7:00-7:30 p.m.	Peking, China (Radio Peking)	17745, 17720
7:00-8:30 p.m.	Prague, Czechoslovakia (Radio Prague)	15350, 15118
7:00-8:45 p.m.	Guatemala City, Guatemala (TGNA)	9585, 6170
7:15-8:00 p.m.	Madrid, Spain (The Voice of Spain)	6105, 6055
7:30-8:00 p.m.	Copenhagen, Denmark (The Voice of Denmark) — no English on Sundays	9669, 5952
7:30-8:00 p.m.	Tokyo, Japan (Radio Japan)	9660, 6130
8:00-8:20 p.m.	Olo, Norway (Radio Norway) — on Sundays only	9520 (OZF), 18235 (JO19), 11705 (JOA4)
8:00-8:30 p.m.	Budapest, Hungary (Radio Budapest)	15175, 11735, 9540
8:00-8:30 p.m.	Sofia, Bulgaria (Sofia Calling)	11910, 9833
8:00-9:00 p.m.	San Jose, Costa Rica (TIFC — The Lighthouse of the Caribbean)	9700
8:15-9:00 p.m.	Berne, Switzerland (Switzerland Calling)	9647, 6037
8:15-9:00 p.m.	Madrid, Spain (The Voice of Spain)	11865 (HERS), 9535 (HER14)
8:30-9:00 p.m.	Bucharest, Romania (Bucharest Calling)	6090, 6130
9:00-9:30 p.m.	Taipei, Taiwan (The Voice of Free China)	11837, 9570
9:00-9:30 p.m.	Stockholm, Sweden (Radio Sweden)	15225, 11915
9:15-9:30 p.m.	Brasaville, FEA (Radio Brasaville, French Equatorial Africa)	9620
9:15-10:00 p.m.	Madrid, Spain (The Voice of Spain)	11970
9:30-10:00 p.m.	Warsaw, Poland (Radio Warsaw)	9560, 6130
10:30-11:00 p.m.	Taipei, Taiwan (The Voice of Free China)	9525, 6025
10:30-11:00 p.m.	Taipei, Taiwan (The Voice of Free China)	15225, 11915

REPRINTED FROM POPULAR ELECTRONICS BY PERMISSION

TIME (PST)	CITY, COUNTRY (NAME)	FREQUENCIES (kc.)
10:30-2:45 a.m.	Wellington, New Zealand (Radio New Zealand)	9540 (ZL2), 6090 (ZL7)
11:30-11:45 p.m.	Papeete, Tahiti (The Voice of France in the Pacific)	6135
12:00-1:15 a.m.	Manila, Philippines (Call of the Orient)	17905, 15300, 11855, 9730

## NEWS BROADCASTS FOR WESTERN NORTH AMERICA

The following listing of news broadcasts has been prepared for those readers living in the Western United States and Canada. Times are given in Pacific Standard Time and the frequencies in kilocycles.

TIME (PST)	CITY AND COUNTRY	FREQUENCIES (kc.)
6:45 a.m.	Djakarta, Indonesia	9710, 4910
7:00 a.m.	Manila, Philippines	11855, 9730
7:30 a.m.	Melbourne, Australia	11770
8:00 a.m.	Stockholm, Sweden	15155
9:00 a.m.	London, England	17700
12:00 Noon	London, England	15310, 11930, 9025
3:00 p.m.	Tokyo, Japan	15310, 11770
3:00 p.m.	Moscow, USSR	17965, 15140
4:00 p.m.	Moscow, USSR	17965, 15140
4:30 p.m.	Delhi, India	17720, 15140
4:30 p.m.	Tokyo, Japan	15235, 11705
5:00 p.m.	Montreal, Canada	15190, 11770
5:00 p.m.	Moscow, USSR	17965, 15140
5:30 p.m.	Kerchi, Pakistan	17750, 15335
5:35 p.m.	Berne, Switzerland	15190, 11770
6:00 p.m.	London, England	11845, 9535, 6155
6:00 p.m.	Moscow, USSR	11930, 9525
6:25 p.m.	Rome, Italy	17845, 15140
6:30 p.m.	Cologne, Germany	9575, 6010
6:30 p.m.	Warsaw, Poland	11735, 9440
6:30 p.m.	Hilversum, Holland (not on Sunday)	9525, 6025
6:45 p.m.	Delhi, India	11855, 9540
6:45 p.m.	Brasaville, French Equatorial Africa	17820, 15140, 11710
7:00 p.m.	Moscow, USSR	11970, 9415
7:00 p.m.	Montreal, Canada	17425, 15140
7:00 p.m.	Bucharest, Romania	11945, 9535
7:00 p.m.	Peking, China	11935, 9535
7:00 p.m.	Prague, Czechoslovakia	17745, 15140
7:15 p.m.	Madrid, Spain	9545, 6170, 6105, 6055
7:30 p.m.	Copenhagen, Denmark (only Mondays)	9520, 6130
7:30 p.m.	Tokyo, Japan	15235, 11705
8:00 p.m.	Moscow, USSR	17425, 15140
8:00 p.m.	Olo, Norway (only Sundays)	15175, 11735, 9540
8:15 p.m.	Sofia, Bulgaria	9700
8:30 p.m.	Berne, Switzerland	9120, 6130
8:30 p.m.	Bucharest, Romania	11840, 9535
8:30 p.m.	Brasaville, French Equatorial Africa	11845, 9535
9:00 p.m.	Taipei, Taiwan	15225, 11915
9:00 p.m.	Moscow, USSR	17845, 15140
9:00 p.m.	Stockholm, Sweden	11770
9:15 p.m.	Brasaville, French Equatorial Africa	9240, 6130
9:15 p.m.	Madrid, Spain	9515, 6075
9:30 p.m.	Warsaw, Poland	15225, 11915
10:30 p.m.	Taipei, Taiwan	9540, 6090
11:30 p.m.	Wellington, New Zealand	6135
12:30 p.m.	Wellington, New Zealand (not on Sunday)	9540, 6090
1:00 a.m.	Manila, Philippines	11855, 9730
2:30 a.m.	Wellington, New Zealand	9540, 6090

ENGLISH LANGUAGE SHORT-WAVE BROADCAST STATIONS BEST HEARD IN EASTERN NORTH AMERICA

TIME (EST) CITY, COUNTRY (NAME) FREQUENCIES (kc.)

6:00-6:30 a.m. Warsaw, Poland (Radio Warsaw) 17000, 15120  
 7:00-7:15 a.m. Helsinki, Finland (Finland Calling) - no English on Sun- 17798, 15190  
 days and holidays 17800, 15120  
 7:15-8:15 a.m. Warsaw, Poland (Radio Warsaw) 11770, (VLA11)  
 7:15-8:45 a.m. Melbourne, Australia (Radio Australia) 15390, 9638  
 8:00-9:30 a.m. Cape Haitien, Haiti (The Evangelistic Voice) - no broad- 17840  
 cast on Thursdays 17700  
 8:15-8:45 a.m. Stockholm, Sweden (Radio Sweden) 17700, 15310, 9008  
 10:00-12:15 p.m. London, England (North American Service) 15365, 11950  
 1:00-4:00 p.m. London, England (General Overseas Service) 9482 (4VC)  
 4:00-5:15 p.m. London, England (General Overseas Service) 15310, 11930  
 4:16-4:45 p.m. Hilversum, Holland (Radio Netherlands) - no English on 17825 (JOA22), 15235 (JO18)  
 Sundays 11930, 9825  
 4:30-5:20 p.m. Jerusalem, Israel (The Voice of Zion) 11937, 11890, 11845,  
 5:00-5:30 p.m. Port-au-Prince, Haiti (Radio Commerce) - on Sundays only 11825, 11805, 11740,  
 5:15-6:15 p.m. London, England (General Overseas Service) 11700, 9700, 9665  
 6:00-6:30 p.m. Tokyo, Japan (Radio Japan) 9515  
 6:00-10:00 p.m. London, England (General Overseas Service) 9875, 6010  
 6:00-1:00 a.m. Moscow, USSR (Radio Moscow) 15235 (JO18), 11705 (JOA4)  
 11910, 9833  
 6:15-7:00 p.m. Ankara, Turkey (Radio Ankara) 9525, 6025  
 7:15-7:35 p.m. Rome, Italy (Italian Broadcasting and Television System) 15180 (CKCX), 11720  
 7:30-7:50 p.m. Tokyo, Japan (Radio Japan) (CHOL)  
 7:30-8:00 p.m. Budapest, Hungary (Radio Budapest) 9700  
 7:30-8:00 p.m. Prague, Czechoslovakia (Radio Prague) 9820  
 7:30-8:30 p.m. Warsaw, Poland (Radio Warsaw) 15400, 9668, 6105  
 7:55-8:45 p.m. Montreal, Canada (Radio Canada) 11970, 9625  
 8:00-8:30 p.m. Sofia, Bulgaria (Sofia Calling) 11865 (HERB), 9535 (HERA),  
 8:00-9:30 p.m. Stockholm, Sweden (Radio Sweden) 6186 (HERC)  
 8:00-10:30 p.m. Cape Haitien, Haiti (The Evangelistic Voice) - no broad- 16176, 11736, 9640  
 cast on Wednesdays and Thursdays 9520 (OZF)  
 8:30-10:15 p.m. Brazzaville, French Equatorial Africa (Radio Brazzaville) 15115, 11915, 9745  
 9:00-9:20 p.m. Oslo, Norway (Radio Norway) - on Sundays only 9575, 6010  
 9:00-9:30 p.m. Copenhagen, Denmark (The Voice of Denmark) - no Eng- 11795, 9640  
 lish on Sundays 9525, 6025  
 9:00-12:00 p.m. Quito, Ecuador (HCJB - The Voice of the Andes) - no 11950, 9590  
 broadcasts on Mondays 6192 (AVHW)  
 9:25-9:45 p.m. Rome, Italy (Italian Broadcasting and Television System) 11970, 9625  
 9:30-9:40 p.m. Cologne, Germany (The Voice of Germany) 11945 (CKNK), 9585 (CKLP)  
 9:30-10:00 p.m. Warsaw, Poland (Radio Warsaw) 11937, 9570  
 9:30-10:10 p.m. Hilversum, Holland (The Happy Station) - special pro- 9585, 6170, 6105, 6065  
 gram on Sundays only 9688, 5952  
 9:30-11:00 p.m. Port-au-Prince, Haiti (Radio Haiti) - on Thursdays only 9360, 6130  
 9:45-10:00 p.m. Brazzaville, French Equatorial Africa (Radio Brazzaville) 9520 (OZF)  
 9:55-10:35 p.m. Montreal, Canada (Radio Canada) 11910, 9833  
 10:00-10:30 p.m. Bucharest, Romania (Bucharest Calling) 9700  
 10:00-11:00 p.m. Prague, Czechoslovakia (Radio Prague) 9647, 6037  
 10:00-11:45 p.m. Guatemala City, Guatemala (TGNA) 11865 (HERG), 9535 (HER4)  
 10:15-11:00 p.m. Madrid, Spain (The Voice of Spain) 9360, 6130  
 10:30-11:00 p.m. Copenhagen, Denmark (The Voice of Denmark) - no Eng- 11007, 9570  
 lish on Sundays 9620  
 11:00-11:30 p.m. Budapest, Hungary (Radio Budapest) 11970  
 11:00-11:30 p.m. Sofia, Bulgaria (Sofia Calling) 9360, 6130  
 11:00-12:00 p.m. San Jose, Costa Rica (TIFC - The Lighthouse of the Carib- 9525, 6025  
 bean)  
 11:15-12:00 p.m. Bern, Switzerland (Switzerland Calling) 11865 (HERG), 9535 (HER4)  
 11:15-12:00 p.m. Madrid, Spain (The Voice of Spain) 9360, 6130  
 11:30-12:00 p.m. Bucharest, Romania (Bucharest Calling) 11007, 9570  
 12:00-12:30 a.m. Stockholm, Sweden (Radio Sweden) 9620  
 12:15-12:30 a.m. Brazzaville, French Equatorial Africa (Radio Brazzaville) 11970  
 12:15-1:00 a.m. Madrid, Spain (The Voice of Spain) 9360, 6130  
 12:30-1:00 a.m. Warsaw, Poland (Radio Warsaw) 9525, 6025

NEWS BROADCASTS FOR EASTERN NORTH AMERICA FREQUENCIES (kc.)

CITY AND COUNTRY TIME (EST) CITY AND COUNTRY TIME (EST) CITY AND COUNTRY TIME (EST)  
 Wellington, New Zealand 9540, 4080  
 Warsaw, Poland 17800, 15120  
 Diakarta, Indonesia 9710  
 Helsinki, Finland 17798, 15190  
 Warsaw, Poland 17800, 15120  
 Melbourne, Australia 17770  
 Warsaw, Poland 17700, 15120  
 Stockholm, Sweden 17840  
 Melbourne, Australia 11770  
 Lisbon, Portugal 21495, 17095  
 London, England 17700  
 London, England 21700, 17895  
 Athens, Greece 17775, 15345  
 London, England 17700  
 Teheran, Iran 15100  
 Damascus, Syria 17845  
 Hivertum, Holland 15345, 11950  
 Jerusalem, Israel 9000  
 Belgrade, Yugoslavia 15310, 11930, 9825  
 London, England 7825, 15235  
 Tokyo, Japan 11937, 11890, 11845, 11825, 11805, 11740, 11700, 9700, 9445  
 Moscow, USSR 9515  
 Ankara, Turkey 4970  
 Caracas, Venezuela (Monday-Friday)  
 Moscow, USSR 11937, 11890, 11845, 11825, 11805, 11740, 11700, 9700, 9445  
 Rome, Italy 9575, 6010  
 Tokyo, Japan 15235, 11705  
 Prague, Czechoslovakia 9585, 6170, 6105, 6065  
 Warsaw, Poland 9525, 6025  
 Moscow, USSR 11800, 11845, 11825, 11805, 11740, 11700, 9445  
 Montreal, Canada 15190, 11720  
 Warsaw, Poland 9525, 6025  
 Sofia, Bulgaria 9700  
 Stockholm, Sweden 9420  
 Brazzaville, French Equatorial Africa 11970, 9625  
 Montreal, Canada 15190, 11720  
 Paramaribo, Surinam (Mondays only) 15407, 4752  
 Bern, Switzerland 11845, 9535, 6165  
 Stockholm, Sweden 9620  
 Oslo, Norway 15175, 11735, 9540  
 Copenhagen, Denmark (Sundays only) 9520  
 Copenhagen, Denmark (Monday only) 9520  
 Moscow, USSR 11890, 11845, 11825, 11805, 11740, 11700, 9700, 9445  
 Rome, Italy 9575, 6010  
 Cologne, Germany 11795, 9640  
 Warsaw, Poland 9525, 6025  
 Hilversum, Holland 11950, 9590  
 (not on Sundays)  
 Brazzaville, French Equatorial Africa 11970, 9625  
 Montreal, Canada 11945, 9585  
 Moscow, USSR 11890, 11845, 11825, 11805, 11740, 11700, 9445  
 Bucharest, Romania 11937, 9570  
 Madrid, Spain 9340, 6130  
 Copenhagen, Denmark (Monday only) 9520  
 Sofia, Bulgaria 9700  
 Moscow, USSR 11890, 11845, 11825, 11805, 11740, 11700, 9700, 9445  
 Madrid, Spain 9340, 6130  
 Bern, Switzerland 11845, 9535  
 Bucharest, Romania 11937, 9570  
 Stockholm, Sweden 9620  
 Moscow, USSR 11860, 11845, 11805, 11740, 11700, 9445, 9445, 9410  
 Madrid, Spain 9340, 6130  
 Brazzaville, French Equatorial Africa 11970  
 Warsaw, Poland 9525, 6025

## CIRCUIT THEORY

### ANTENNA STAGE

The RF amplifier V1 provides the necessary gain and preselection required for high sensitivity and rejection of image frequencies. Individual antenna input coils are used for either a balanced or unbalanced input (depending on method of antenna connection).

The ANT TRIM control, adjustable from the front panel, acts as a compensating capacitor to permit matching of the input circuits to any antenna.

### MIXER STAGE

The use of a separate high-frequency oscillator, V3, results in a more stable receiver, particularly at the higher frequencies. The output signal from V1 is electronically mixed with the output of V3 in the mixer tube V2. V3 provides a signal 455 KC higher than the incoming signal on all frequency ranges.

### Q-MULTIPLIER AND BFO

The Q-Multiplier circuit (V4) serves as both BFO and Q-Multiplier in this receiver. Used as a BFO for CW and SSB operation, the circuit, which acts as an oscillator, is coupled to the IF stage (via stray coupling) and provides the signal necessary for producing a beat note, or for carrier reinsertion during SSB operation. When the SELECTIVITY control, comprising R26 and S4, is in the CW-SSB position during this operation, R26 is in its maximum position. The frequency of the signal is varied by means of C31, the BFO-Q-MULT FREQUENCY control. This adjusts the pitch during CW operation or clarity of speech during SSB operation. For Q-Multiplier operation, S4 is switched away from the CW-SSB position, thus connecting the circuit directly to the IF stage through a coupling capacitor C9. The circuit serves as a positive feedback device having a highly selective tuned circuit which acts as a narrow "gate" for IF frequencies. The width of this gate is adjusted by means of R26 which controls the gain of V4. The resultant narrow peak can be moved around in the IF pass-band by adjustment of C31. The selectivity thus becomes adjustable and, in addition, the portion of the signal which contains the least amount of adjacent signal interference can be selected.

### IF STAGES

Two stages of IF amplification, V5 and V6, provide sufficient gain and selectivity for good performance. For maximum selectivity, double-tuned transformers, T2, T3 and T4, are used for interstage coupling. High-Q permeability-tuned transformers improve performance and add to ease of tuning. R24 varies the gain of V6 and therefore acts as the IF GAIN control.

The S-meter is placed in the circuit in such a manner that readings increase with signal strength. R28, the ZERO ADJ control, is adjusted for zero current through the meter with no signal input. The S-meter is only accurate when the IF gain control is at maximum, nor does the meter function properly when AVC is off.

### DETECTOR, AVC, ANL, 1st AUDIO

One diode of V7 (pin 5) serves as both detector and AVC rectifier. The rectified AVC voltage is applied to RF stage V1 and IF stage V5 to keep the output level of the receiver constant regardless of input signal variations. In the MVC position of S6, the AVC is grounded and is not in operation. The other diode (pin 6) acts as an automatic noise limiter by cutting noise peaks (caused by auto ignition, etc.) during reception. Since this causes a slight reduction in fidelity, the circuit should only be used when necessary.

The rectified signal from the detector is fed to the grid of the triode section of V7 which acts as the 1st audio amplifier. Audio level is adjusted by means of R25, the AF GAIN control.

## AUDIO AMPLIFIER


V8 is employed in a conventional resistance-coupled audio amplifier which is connected to output transformer T5. Taps are provided on the secondary of the transformer for 4 or 8 ohm speakers. A standard phone jack, accessible from the front panel, permits the use of low impedance headphones when desired. Insertion of a plug in the jack automatically disconnects any speaker connected to the 8 ohm tap.

## RECTIFIER


V9 functions as a full-wave rectifier in a conventional power supply circuit. C26, R23 and C27 provide the necessary filtering. The primary of the AC power transformer is fused for safety. The tapped primary also permits the use of the receiver on low AC voltages (less than 100), voltage selection being effected by S3. In most cases however, the switch should be left in the 117V position.

## FUNCTION SWITCH

This switch determines the mode of operation. In all positions except OFF, AC power is applied to the primary of T1, thus powering the receiver. In REC AM, DC plate voltage is applied (through the external jumper plug and the switch) to V1, V2 and V3. All other tubes (except V4) receive DC plate voltage direct from the power supply. In the SEND position, plate voltage to V1, V2 and V3 is cut off. In the Q-MULT position, plate voltage is also applied to V4, in addition to all other tubes.


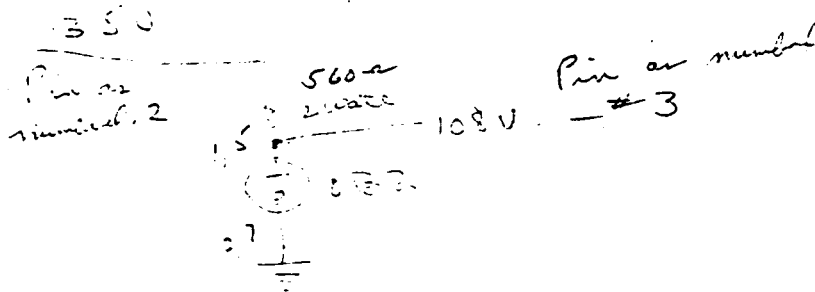


RF V1 6BA6  
 MIXER V2 6BE6  
 Q MULTIPLIER-BFO V4 6AV6  
 IF1 V5 6BA6  
 IF2 V6 6BA6  
 DETECTOR, ANL, 1<sup>ST</sup> AUDIO V7 6AV6  
 AUDIO OUTPUT V8 6AQ5

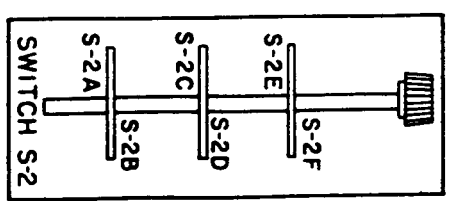

NOTES:  
 S-2 SHOWN IN HIGH RANGE POSITION (10.5-30MC)  
 CHASSIS GROUND.  
 S-1 SHOWN IN "OFF" POSITION.

SCHEMATIC DIAGRAM HE-30

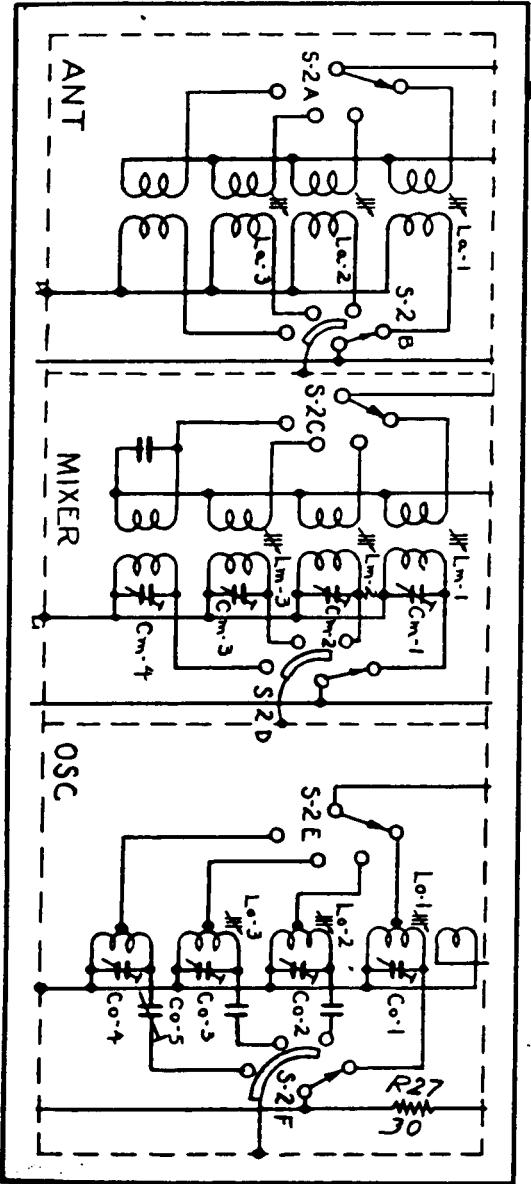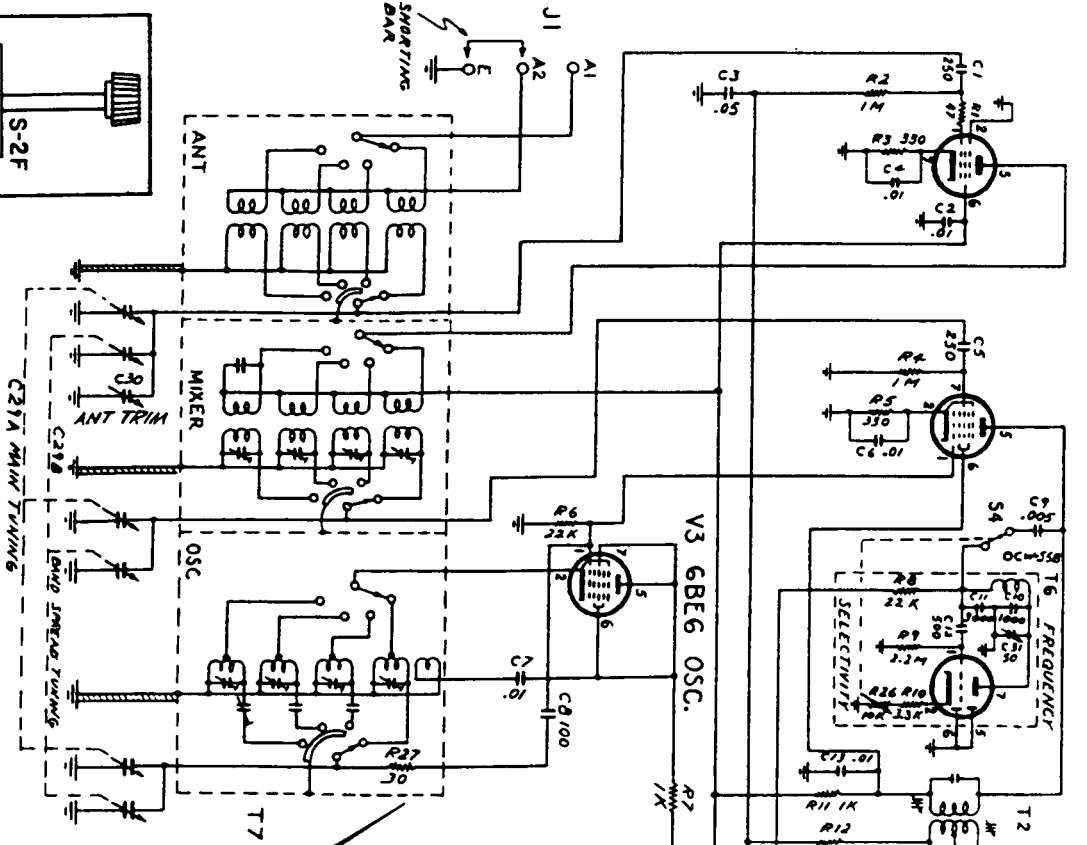

## SERVICE

This section contains information which will aid qualified service personnel in the servicing and alignment of your receiver.

### CHASSIS REMOVAL

The top cover is held by four screws - two each side. The bottom cover is held by six screws on the underside of the unit.

### IF ALIGNMENT

#### EQUIPMENT REQUIRED:


AC Voltmeter  
Calibrated RF Signal Generator  
Non-Metallic Alignment Tool (GC No. 8722 or equiv.)

1. Connect a loudspeaker to the output terminals. Remove the local oscillator V3, 6BE6, from its socket.
2. Set the receiver controls as follows:  
FUNCTION switch on REC AM  
AF GAIN control to maximum  
SELECTIVITY control on CW-SSB  
IF GAIN control 3/4 full position  
MVC - AVC switch on MVC  
ANL off
3. Connect the voltmeter (3 volt AC range) across the speaker terminals.
4. Connect the signal generator between pin 7 of V2 socket (6BE6 mixer tube) and ground.
5. Set the signal generator at 455KC and modulate it with either 400 or 1000 cycles (30%).
6. Adjust the secondary and primary of IF transformers T4, T3 and T2 (see Fig. A). Follow the order given - secondary first, then primary in each case. Topside adjustments are secondaries, bottom of chassis adjustments are primaries.

During alignment, lower the generator output progressively to prevent overloading. Repeat alignment until no further improvement is noted.

### BFO AND Q-MULTIPLIER ADJUSTMENT

1. All receiver controls should be set as in the IF alignment with the exception of the following:  
FUNCTION switch to Q-MULT  
BFO-Q-MULT FREQUENCY to mid-position (white dot)  
Reduce AF GAIN
2. Set the generator to 455KC, unmodulated RF.
3. Adjust the BFO coil T6 (located next to V4, Q-MULT) until a zero beat is heard (also accompanied by a peak reading on voltmeter).

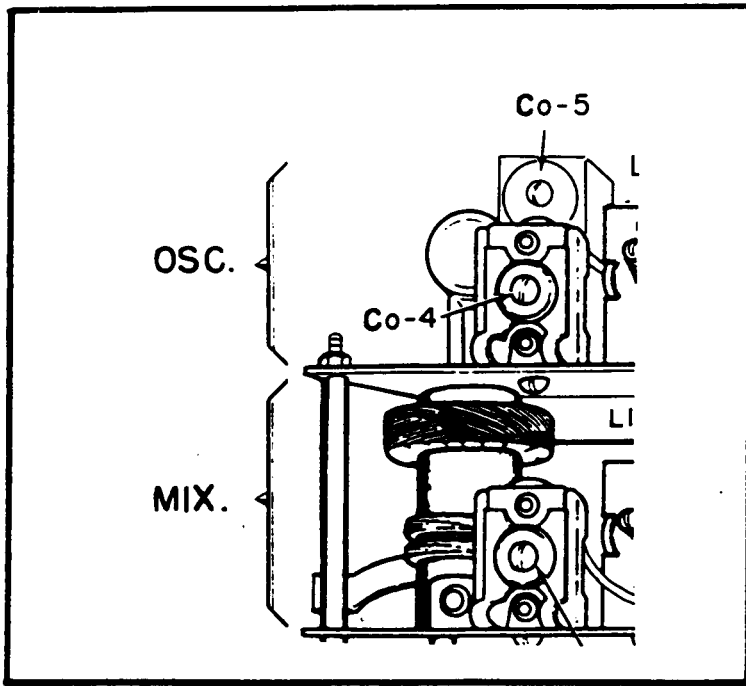

THESE TWO ADJUSTMENTS MADE WITH BOTTOM COVER REMOVED-REMAINDER OF RF ALIGNMENT CARRIED OUT WITH COVER IN PLACE



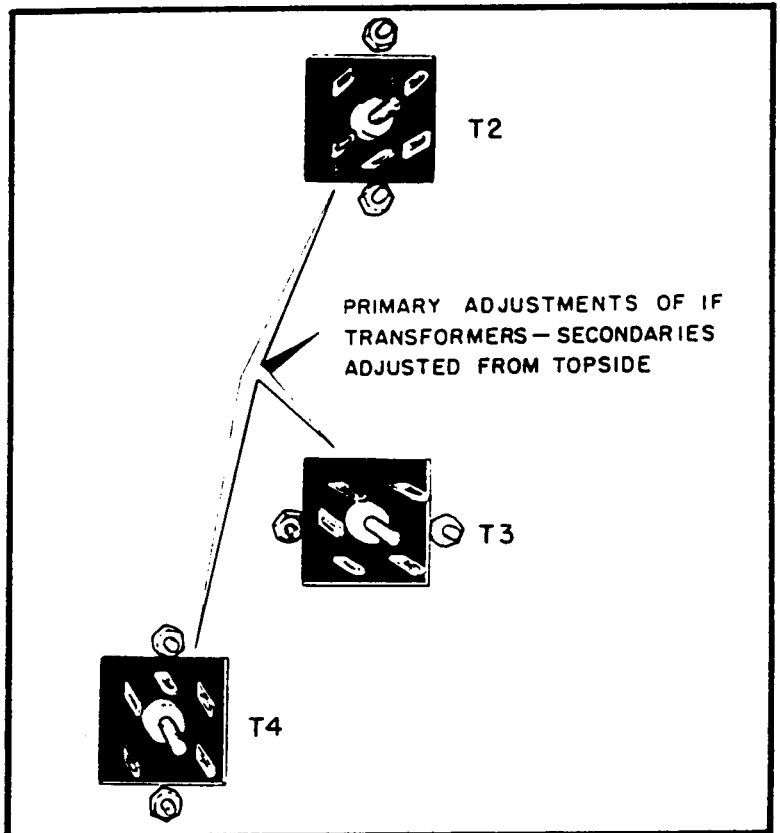


FIGURE A

## RF ALIGNMENT

1. Replace V3, 6BE6 local oscillator, in its socket.
2. Using a short jumper wire, connect antenna terminals A2 and E together.
3. Connect AC voltmeter (3 volt range) and loudspeaker across speaker terminals.
4. Connect the modulated output of the RF signal generator to antenna terminals A1 and E.
5. Rotate the ANT TRIM control until the capacitor plates are half-meshed. If the indicator dot on control knob is not at the 12 o'clock position, loosen set screw, place knob in this position and tighten screw again (without disturbing position of capacitor plates). Do not change control from the 12 o'clock position until alignment is completed.
6. Set all receiver controls as for IF alignment. Set BANDSPREAD pointer at 100 on Logging Scale and make sure FUNCTION switch is on REC AM.
7. Carry out alignment as indicated in the chart.  
Note: Lower generator output progressively to prevent overloading as circuits come into line.

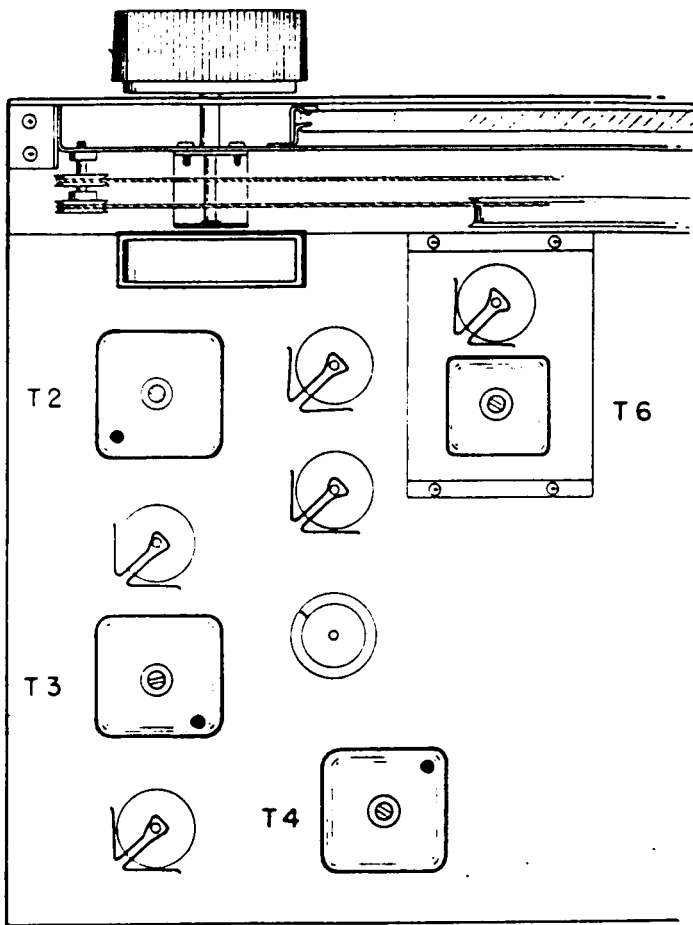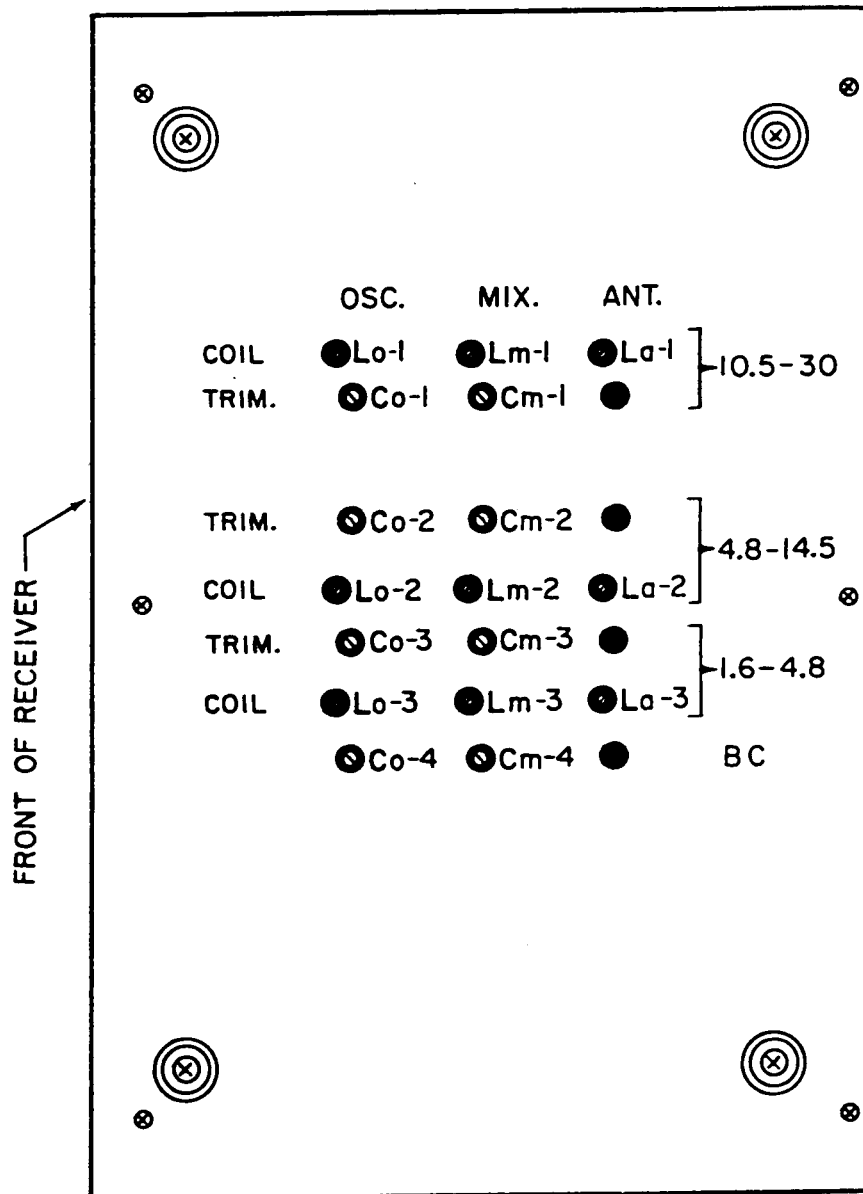

**FIGURE B**

**LOCATION OF RF ADJUSTMENTS**



## RF ALIGNMENT CHART

STEP	BAND SELECTOR	SIGNAL GENERATOR	MAIN TUNING	ADJUST	REMARKS	VIEW
1	.55-1.6	.6 MC (600KC)	.6 MC	Co-5 (Osc)	Adjust for peak reading on voltmeter	Figure A
2	.55-1.6	1.4 MC (1400KC)	1.4 MC	Co-4 (Osc)		
Repeat steps 1 & 2 until calibration is correct at both ends of scale (.6 and 1.4 MC). The remainder of the alignment must be carried out with the bottom cover in place. Remove power first.						
3	.55-1.6	1.4 MC (1400KC)	1.4 MC	Cm-4 (mixer)	Adjust for peak reading on voltmeter	
4	1.6-4.8	2.0 MC	2.0 MC	Lo-3 (Osc)		
5	1.6-4.8	4.0 MC	4.0 MC	Co-3 (Osc)		
Repeat steps 4 and 5 until calibration is correct at both ends of the scale (2.0 and 4.0 MC)						
6	1.6-4.8	2.0 MC	2.0 MC	Lm-3 (mixer)	Adjust for peak reading on voltmeter	
7	1.6-4.8	4.0 MC	4.0 MC	Cm-3 (mixer)		
Repeat steps 6 and 7 until calibration is correct at both ends of the scale (2.0 and 4.0 MC)						
8	1.6-4.8	2.0 MC	2.0 MC	La-3 (Ant)	Adjust for peak reading on voltmeter	Figure B
9	4.8-14.5	5.0 MC	5.0 MC	Lo-2 (Osc)		
10	4.8-14.5	14.0 MC	14.0 MC	Co-2 (Osc)		
Repeat steps 8 and 9 until calibration is correct at both ends of the scale (5.0 and 14.0 MC)						
11	4.8-14.5	5.0 MC	5.0 MC	Lm-2 (mixer)	Adjust for peak reading on voltmeter	
12	4.8-14.5	14.0 MC	14.0 MC	Cm-2 (mixer)		
Repeat steps 11 and 12 until calibration is correct at both ends of the scale (5.0 and 14.0 MC)						
13	4.8-14.5	5.0 MC	5.0 MC	La-2 (Ant)	Adjust for peak reading on voltmeter	
14	10.5-30	13.0 MC	13.0 MC	Lo-1 (Osc)		
15	10.5-30	28.0 MC	28.0 MC	Co-1 (Osc)		
Repeat steps 14 and 15 until calibration is correct at both ends of scale (13.0 and 28.0 MC)						
16	10.5-30	13.0 MC	13.0 MC	Lm-1 (mixer)	Adjust for peak reading on voltmeter	
17	10.5-30	28.0 MC	28.0 MC	Cm-1 (mixer)		
Repeat steps 16 and 17 until calibration is correct at both ends of scale (13.0 and 28.0 MC)						
18	10.5-30	13.0 MC	13.0 MC	La-1 (Ant)	Adjust for peak reading on voltmeter	

## VOLTAGE MEASUREMENTS

Voltages taken with receiver controls in the following positions

BANDSPREAD pointer at 0 on Logging Scale

MAIN TUNING pointer at 0 on Logging Scale

FUNCTION switch on REC AM

AF GAIN control fully counter-clockwise (minimum)

SELECTIVITY control on CW-SSB

BFO-Q-MULT FREQUENCY control on mid-position (white dot)

BAND SEL on .55-1.6

IF GAIN control fully counter-clockwise (minimum)

MVC-AVC switch on AVC

ANL switch on "off" position

Short A1, A2 and E with jumper wire

Voltage selector switch in 117 volt position

	SOCKET PIN NUMBERS								
	1	2	3	4	5	6	7	8	9
RF									
V1 (6BA6)	0	0	6.3V AC	0	135	135	3.5	-	-
MIXER									
V2 (6BE6)	-7.7	3.6	6.3V AC	0	125	125	-	-	-
OSC									
V3 (6BE6)	-7.7	0	6.3V AC	0	125	125	125	-	-
Q-MULT									
* V4 (6AV6)	**2.2 Meg	**3.3 K	6.3V AC	0	0	0	135	-	-
1st IF									
V5 (6BA6)	0	0	6.3V AC	0	135	135	19	-	-
2nd IF									
V6 (6BA6)	0	0	6.3V AC	0	135	135	19	-	-
Detector, ANL 1st audio									
V7 (6AV6)	-.3	0	6.3V AC	0	-.06	-.08	70	-	-
Audio Output									
V8 (6AQ5)	0	7	6.3V AC	0	200	135	NC	-	-
Rectifier									
V9 (5Y3)	NC	205	NC	200	NC	200	NC	205	-


\* Place FUNCTION in Q-MULT position and remove V4 from socket. Check voltages from top of socket (numbering is now counter-clockwise)

\*\* Resistance measurements taken at these pins - REMOVE AC POWER FROM RECEIVER FIRST


1. Voltages taken with 20,000 ohms per volt meter and, unless otherwise noted, measured from chassis ground to joint indicated.
2. Line voltage maintained at 117V AC for these measurements.
3. Tolerance on components permits a variation of  $\pm 15\%$  in readings.
4. All voltages DC unless otherwise noted.

## DIAL CORD STRINGING

Set main or bandspread tuning capacitor as indicated. In both cases, tie dial cord to spring at the START point, leaving approximately 4 inches of cord free at this point. Restring in the direction indicated, keeping a moderate amount of tension on the cord. Make final tie to free end of cord from spring after cutting off any excess cord.

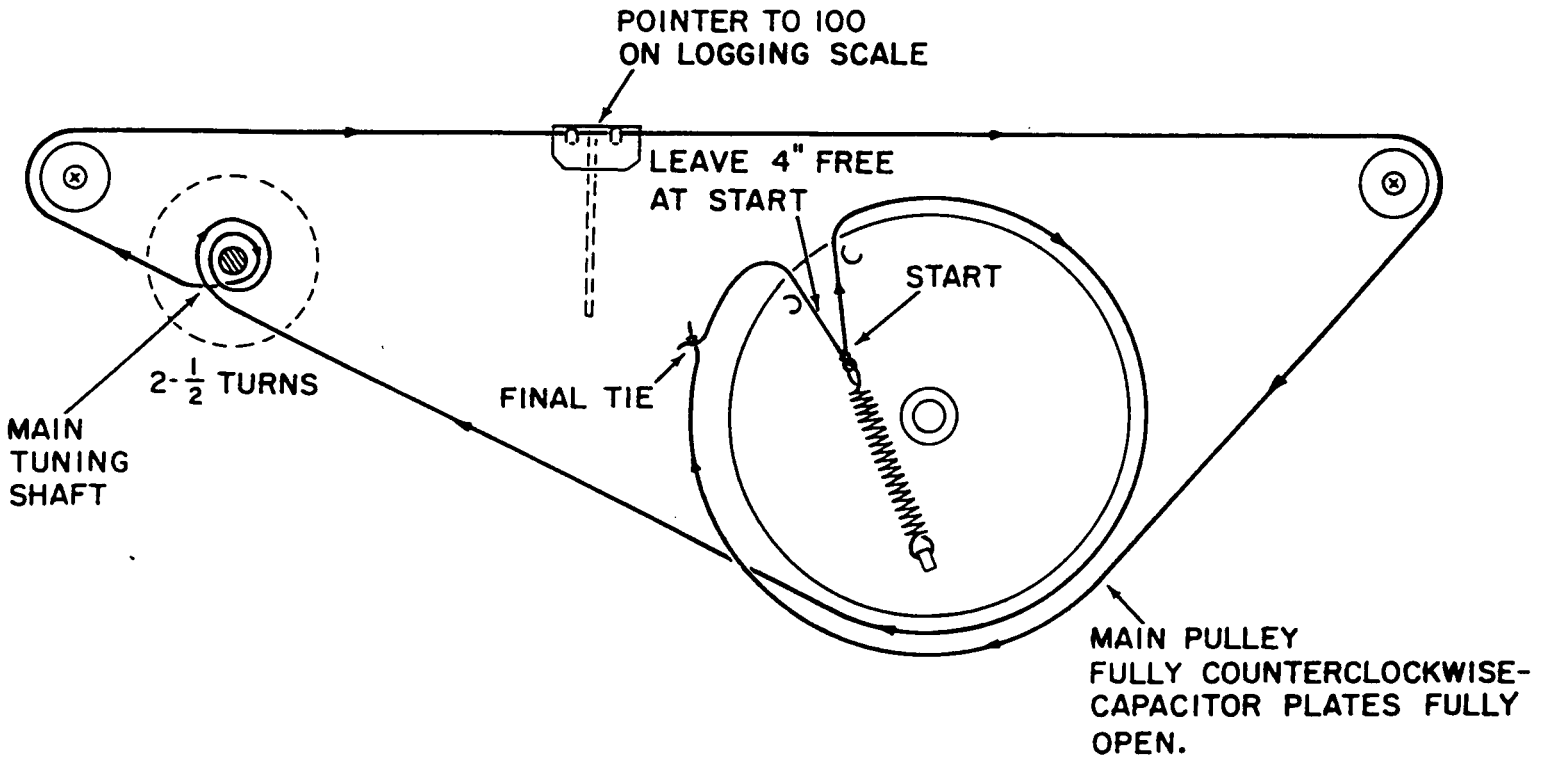

MAIN TUNING DIAL CORD STRINGING

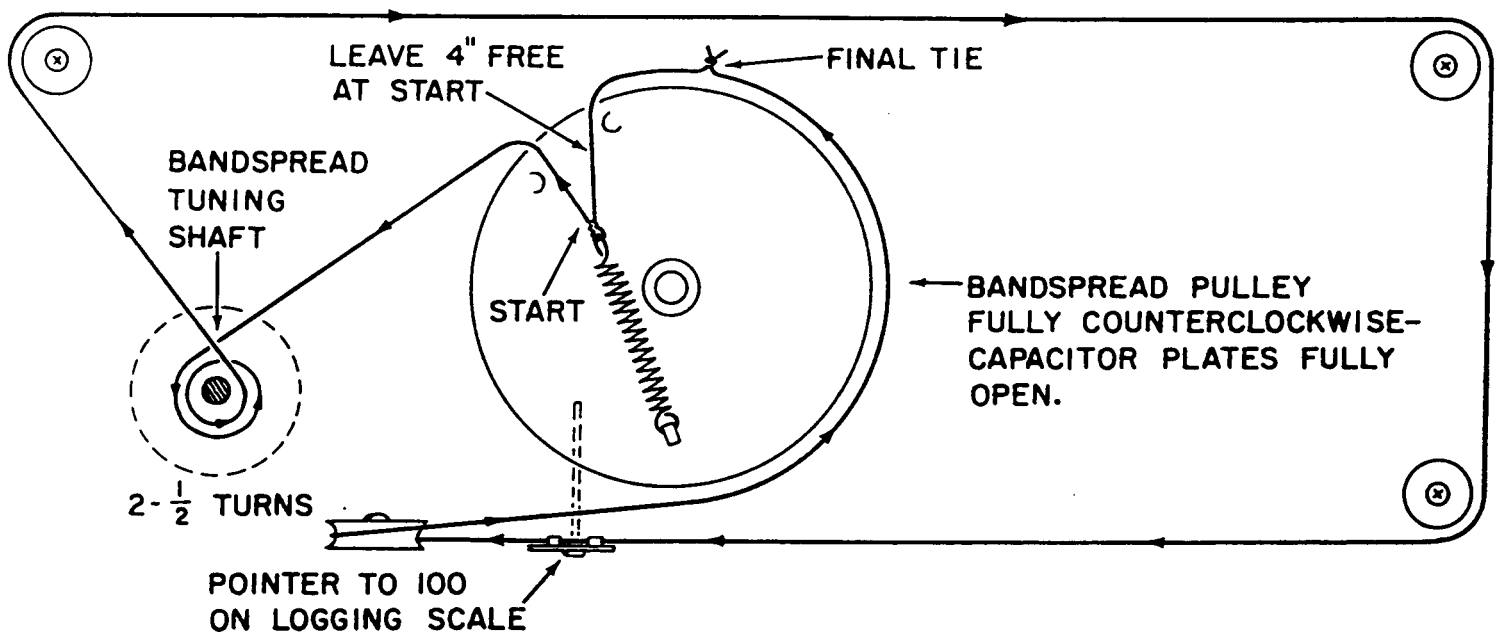

BANDSPREAD DIAL CORD STRINGING

## PARTS LIST

CIRCUIT DESIGNATION	DESCRIPTION	QUANTITY	PART NO.
<b>CAPACITORS</b>			
C1, C5	250 mmfd, mica	2	30-100
C2, C4, C6, C7, C13, C14, C15, C16, C17, C18, C19	0.01 mfd, disc	11	30-101
C3	0.05 mfd, tubular	1	30-102
C8, C20, C22	100 mmfd, mica	3	30-103
C9	0.005 mfd, disc	1	30-104
C10	0.001 mfd, mica	1	30-105
C11	0.003 mfd, mica	1	30-106
C12	500 mmfd, mica	1	30-107
C21, C23, C28	0.01 mfd, tubular	3	30-108
C24	10 mfd, electrolytic	1	30-109
C25	0.005 mfd, tubular	1	30-110
C26, C27	40-40. mfd, 300 volt electrolytic	1	30-111
C29A	Main Tuning Capacitor	1	30-112
C29B	Band Spread Tuning Capacitor	1	30-113
C30	Antenna Trimmer	1	30-114
C31	50 mmfd, variable capacitor (BFO)	1	30-115
<b>RESISTORS</b>			
R1	47 ohm, 1/4 watt	1	30-116
R2, R4	1 M (meg) ohm, 1/4 watt	2	30-117
R3, R5, R13	330 ohm, 1/2 watt	3	30-118
R6	22 K (kil) ohm, 1/4 watt	1	30-119
R7, R11, R14, R16	1 K ohm, 1/2 watt	4	30-120
R8	22 K ohm, 1/2 watt	1	30-121
R9, R18	2.2 M ohm, 1/4 watt	2	30-122
R10	3.3 K ohm, 1/2 watt	1	30-123
R12	100 K ohm, 1/4 watt	1	30-124
R15	2.2 K ohm, 1/4 watt	1	30-125
R17	47 K ohm, 1/4 watt	1	30-126
R19	4.7 M ohm, 1/4 watt	1	30-127
R20	220 K ohm, 1/2 watt	1	30-128
R21	470 K ohm, 1/4 watt	1	30-129
R22	470 ohm, 1 watt	1	30-130
R23	2 K ohm, 10 watts	1	30-131
R24	10 K ohm, IF Gain Control	1	30-132
R25	500 K ohm, Audio Gain Control	1	30-133
R26	10 K ohm, Selectivity Control	1	30-134
R27	30 ohm, 1/4 watt	1	30-135
R28	500 ohm, S-meter Zero Adjust	1	30-136
<b>TUBES</b>			
V1, V5, V6	6BA6	3	30-137
V2, V3	6BE6	2	30-138
V4, V7	6AV6	2	30-139
V8	6AQ5	1	30-140
V9	5Y3	1	30-141
PL	#40 light bulb	2	30-142

CIRCUIT DESIGNATION	DESCRIPTION	QUANTITY	PART NO.
<b>SWITCHES</b>			
S1	FUNCTION Switch	1	30-156
S2	BAND SEL Switch	1	30-157
S3	SPDT Input Voltage Selector	1	30-158
S4	CW-SSB Switch (On R26)	1	30-159
S5	SPST ANL OFF - ON Switch	1	30-160
S6	SPST MVC - AVC Switch	1	30-161
<b>TRANSFORMERS, AND COILS</b>			
T1	Power Transformer	1	30-162
T2, T3, T4	IF Transformer (455 KC)	3	30-163
T5	Output Transformer	1	30-164
T6	Q-MULTIPLIER Coil	1	30-165
<b>MISCELLANEOUS</b>			
M1	S-Meter	1	30-167
J1	Antenna Input Jack	1	30-168
J2	Earphone Jack	1	30-169
J3	External Control Jack	1	30-170
P1	External Control Plug	1	30-171
	Dial Pointer	1	30-172
	Small Knobs	6	30-173
	Large Tuning Knobs	2	30-174
	Antenna Trimmer Knob	1	30-175
	Fuse Holder	1	30-176
	Q-Multiplier Assembly Chassis	1	30-177
	Glass Dial Plate	1	30-178
	Fly Wheels	2	30-179
	Pilot Light Assembly	1	30-180
	Top Cabinet Cover	1	30-181
	7-Pin Miniature Socket	8	30-182
	Octal Socket	1	30-183
	Bottom Cabinet Cover	1	30-184
	Main Chassis	1	30-185
<b>RF ASSEMBLY</b>			
	.55 - 1.6 MC Antenna Coil, Non-adjustable (located in ANT section)	1	30-189
La-3	1.6 - 4.8 MC Antenna Coil, Adjustable	1	30-190
La-2	4.8 - 14.5 MC Antenna Coil, Adjustable	1	30-191
La-1	10.5 - 30 MC Antenna Coil, Adjustable	1	30-192
	.55 - 1.6 Mixer Coil, Non-adjustable (located in the MIXER section)	1	30-193
Lm-3	1.6 - 4.8 MC Mixer Coil, Adjustable	1	30-194
Lm-2	4.8 - 14.5 MC Mixer Coil, Adjustable	1	30-195
Lm-1	10.5 - 30 MC Mixer Coil, Adjustable	1	30-196
	.55 - 1.6 MC Oscillator Coil, Non-adjustable (located in the OSCILLATOR section)	1	30-197
Lo-3	1.6 - 4.8 MC Oscillator Coil, Adjustable	1	30-198
Lo-2	4.8 - 14.5 MC Oscillator Coil, Adjustable	1	30-199
Lo-1	10.5 - 30 MC Oscillator Coil, Adjustable	1	30-200
Cm-4	.55 - 1.6 MC Mixer Trimmer Capacitor	1	30-201
Cm-3	1.6 - 4.8 MC Mixer Trimmer Capacitor	1	30-202
Cm-2	4.8 - 14.5 MC Mixer Trimmer Capacitor	1	30-203
Cm-1	10.5 - 30 MC Mixer Trimmer Capacitor	1	30-204
Co-4	.55 - 1.6 MC Oscillator Trimmer Capacitor	1	30-205
Co-3	1.6 - 4.8 MC Oscillator Trimmer Capacitor	1	30-206
Co-2	4.8 - 14.5 MC Oscillator Trimmer Capacitor	1	30-207
Co-1	10.5 - 30 MC Oscillator Trimmer Capacitor	1	30-208